
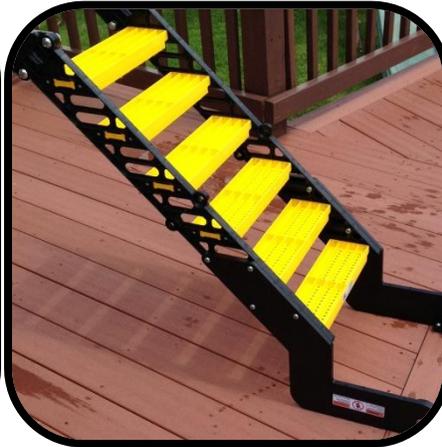


WAG Boarding Steps™

Model PM-6 / Model XPM-6

Owner's Manual

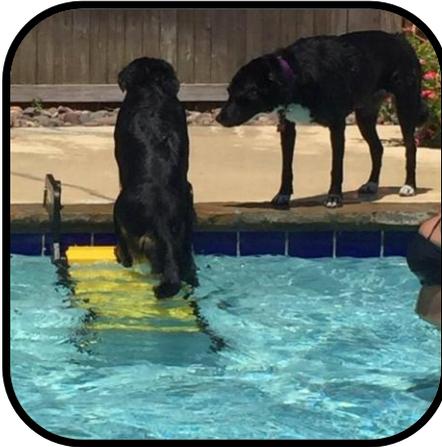


Read this manual completely and follow instructions prior to use.

Welcome to the WaterDog Adventure Gear™ family and thank you for your purchase!

As excited as you and your dog are to begin using your WAG Boarding Steps, there are a few important actions to take prior to use and for safe and enjoyable ongoing ownership.

Improper use may cause injury and/or equipment damage.
WAG Boarding Steps have a maximum capacity of 130 pounds
and are designed for dog use only.

➔ Assembly Overview

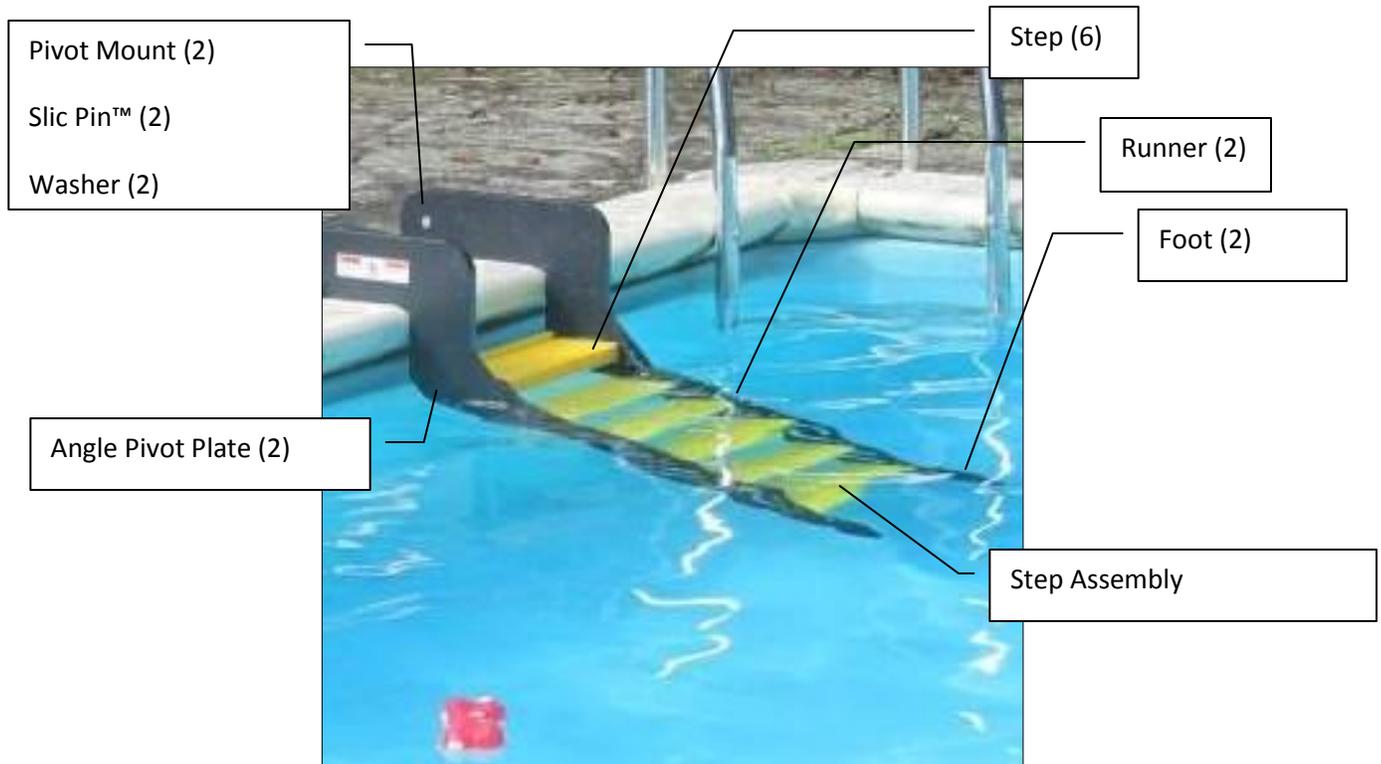

Assembly


Tools Required: 1/2" socket driver, 3/16" hex driver

Your new WAG Boarding Steps come partially assembled from the factory. Hardware is inserted in the component where it will be required. Carefully unpack contents of shipping carton to avoid damage or loss of hardware. Assembly is the same for the PM-6 and XPM-6 models, but the XPM-6 has 8" longer Angle Pivot Plates to extend the Pivot Mounts further back.



Attach the Angle Pivot Plates to each side of the Step Assembly using the hardware provided in the holes it was shipped in; top four (4) holes in the Runners. Make sure the warning labels are facing outward. The screw heads should be on the outside and the washers and nylon locking nuts should be on the inside of the assembly. Tighten securely. Attach the Pivot Mounts to the Angle Pivot Plates using the Slic Pins™ and washers. The Pivot Mounts can be mounted on the inside or the outside of the plates (inside shown). The pins should be inserted through the side plates first, then the pivot mounts, and finally the washers. Make sure the pins are inserted all the way so that the plunger on the Slic Pin is raised and restraining the washer. To remove the assembly, depress the pin plungers and remove the pins and washers from the pivot mounts.






Installation




Determine the desired mounting location. Slide the assembly so that the 90 degree corner of the Angle Pivot Plates is against the platform edge or inside pool edge. Mark the location of the four (4) mounting holes in the Pivot Mounts on the mounting surface. Mounting options include 5/16" through bolts, lag screws, tapped inserts or threaded anchor studs. Secure using stainless steel hardware (not provided) to prevent corrosion. Ensure the step assembly is not twisted and is at approximately a 45 degree angle (steps level). Test the assembly for stability before allowing your dog to use. It is recommended that someone be in the water adjacent to the assembly during the first few times the dog uses them. Never let your dog swim unsupervised.



Care and Maintenance

Your new WAG Boarding Steps are constructed from high-quality materials that should provide years of enjoyment.

- Periodically check mounting platform for damage. Repair as necessary.
- All of the fasteners are stainless steel. Check for loose or missing fasteners prior to use and tighten or replace as necessary.
- The plastic parts are formulated for outdoor use and have good impact resistance. Periodically check for cracked parts and replace as necessary. Remove your step assembly when not in use and store out of direct sunlight for maximum life.



Customer Support

For questions regarding your WAG Boarding Steps or to order replacement parts, please contact our toll-free customer support line at:

1-877-**WAG**-2272
(1-877-924-2272)